

„Send HTTP request error” hibaüzenet?

1. Írja be a DNS szerver címét a LAN >> General Setup résznél, ahogy azt a képen láthatja.

LAN >> General Setup

Ethernet TCP / IP and DHCP Setup

LAN IP Network Configuration

For NAT Usage

1st IP Address: 192.168.1.1

1st Subnet Mask: 255.255.255.0

For IP Routing Usage: Enable Disable

2nd IP Address: 192.168.2.1

2nd Subnet Mask: 255.255.255.0

2nd Subnet DHCP Server

RIP Protocol Control: Disable

DHCP Server Configuration

Enable Server Disable Server

Relay Agent: 1st Subnet 2nd Subnet

Start IP Address: 192.168.1.10

IP Pool Counts: 50

Gateway IP Address: 192.168.1.1

DHCP Server IP Address for Relay Agent:

DNS Server IP Address

Force DNS manual setting

Primary IP Address: 168.95.192.1

Secondary IP Address: 168.95.1.1

OK

2. Elsőnek írja be az Ön ISP DNS címét az IP Address helyére, ha így sem oldódik meg a probléma, akkor válasszon a lent felsorolt listából egy DNS kiszolgáltót.

1. Cisco.com

NS1.cisco.com Internet address = 128.107.241.185

NS2.cisco.com Internet address = 192.135.250.69

2. Microsoft.com

DNS1.SJ.MSFT.NET Internet address = 65.54.248.222

DNS1.TK.MSFT.NET Internet address = 207.46.245.230

DNS3.JP.MSFT.NET Internet address = 207.46.72.123

DNS3.UK.MSFT.NET Internet address = 213.199.144.151

DNS1.CP.MSFT.NET Internet address = 207.46.138.20

DNS1.DC.MSFT.NET Internet address = 207.68.128.151